


## Spare parts for dial caliper 1312series

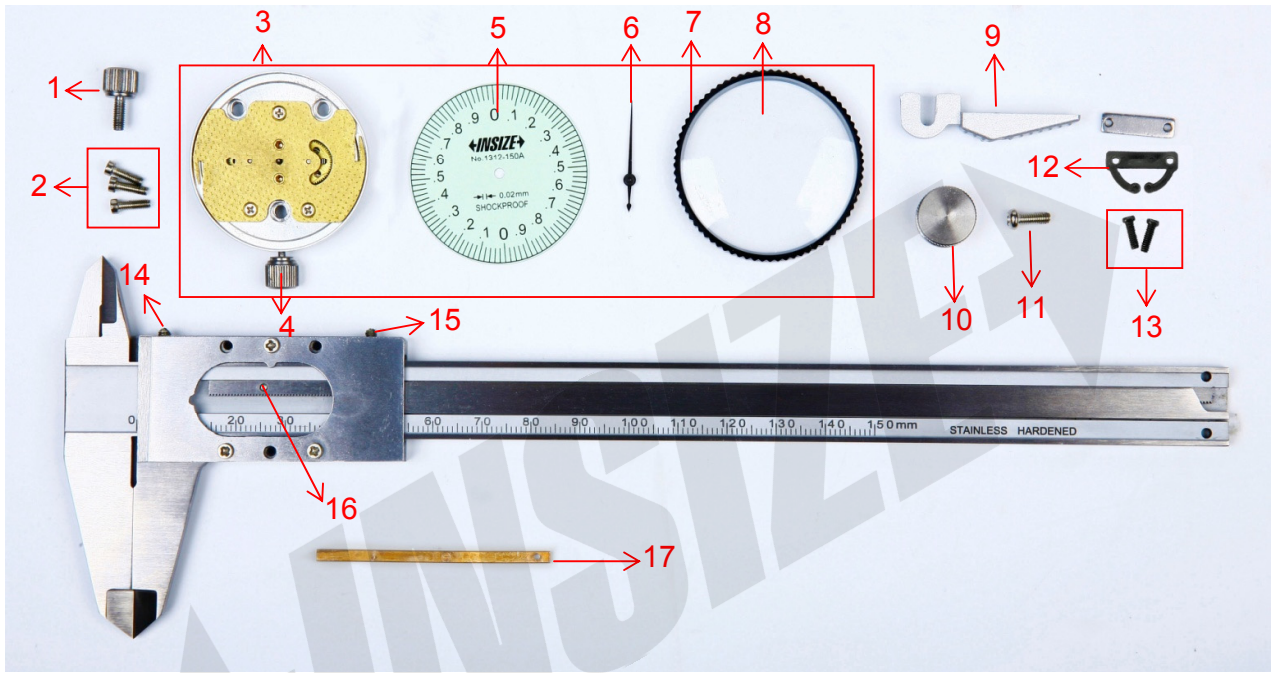

Part NO.	Code	Description
1	SP-LOCK-D2	Locking screw (-150/-200/-300)
2	SP- MECHANISM SCREW-1312	Mechanism fixed screw
3	SP-HEADER-1312-150-DY	Header for 1312-150 (include 4, 5, 6, 7 and 8)
	SP-HEADER-1312-200-DY	Header for 1312-200 (include 4, 5, 6, 7 and 8)
	SP-HEADER-1312-300-DY	Header for 1312-300 (include 4, 5, 6, 7 and 8)
4	SP-LOCK-D5	Bezel locking screw
5	SP-DIAL-1312-150-DY	Dial plat (-150)
	SP-DIAL-1312-200-DY	Dial plat (-200)
	SP-DIAL-1312-300-DY	Dial plat (-300)
6	SP-POINTER-1312-150/200-DY	Pointer (-150/-200)
	SP-POINTER-1312-300-DY	Pointer (-300)
7	SP-BEZEL-150/200	Bezel(-150/-200)
	SP-BEZEL-300	Bezel(-300)
8	SP-GLASS-150/200	Glass(-150/-200)
	SP-GLASS-300	Glass(-300)
9	SP-SUPPORT-150	Thumb wheel support (-150/200)
	SP-SUPPORT-300	Thumb wheel support (-300)
10	SP-WHEEL-GG150	Thumb wheel for 1312-150A with 3.2mm thickness main scale
	SP-WHEEL-GG150-1	Thumb wheel for 1312-150A with 3.5mm thickness main scale
	SP-WHEEL-GG200	Thumb wheel for 1312-200A with 3.5mm thickness main scale
	SP-WHEEL-GG300	Thumb wheel for 1312-300A with 4mm thickness main scale
11	SP-SUPPORT SCREW-1312	Support fixed screw
12	SP-BAFFLE-150/200-DY	End stop plate (-150/-200)
	SP-BAFFLE-300-DY	End stop plate (-300)
13	SP-STOP SCREW-150/200-DY	Stop screw (-150/-200)
	SP-STOP SCREW-300-DY	Stop screw (-300)
14	SP-STRIP SCREW-1312-1-DY	Strip screw
15	SP-STRIP SCREW-1312-2-DY	
16	SP-BAR SCREW-150/200-DY	Rack fixed screw (-150/200)
	SP-BAR SCREW-300-DY	Rack fixed screw (-300)
17	SP-STRIP-1312-DY	Copper strip (-150/-200)
	SP-STRIP-1312-1-DY	Copper strip (-300)