


Spare parts for bore gage 2852 and 2152 series

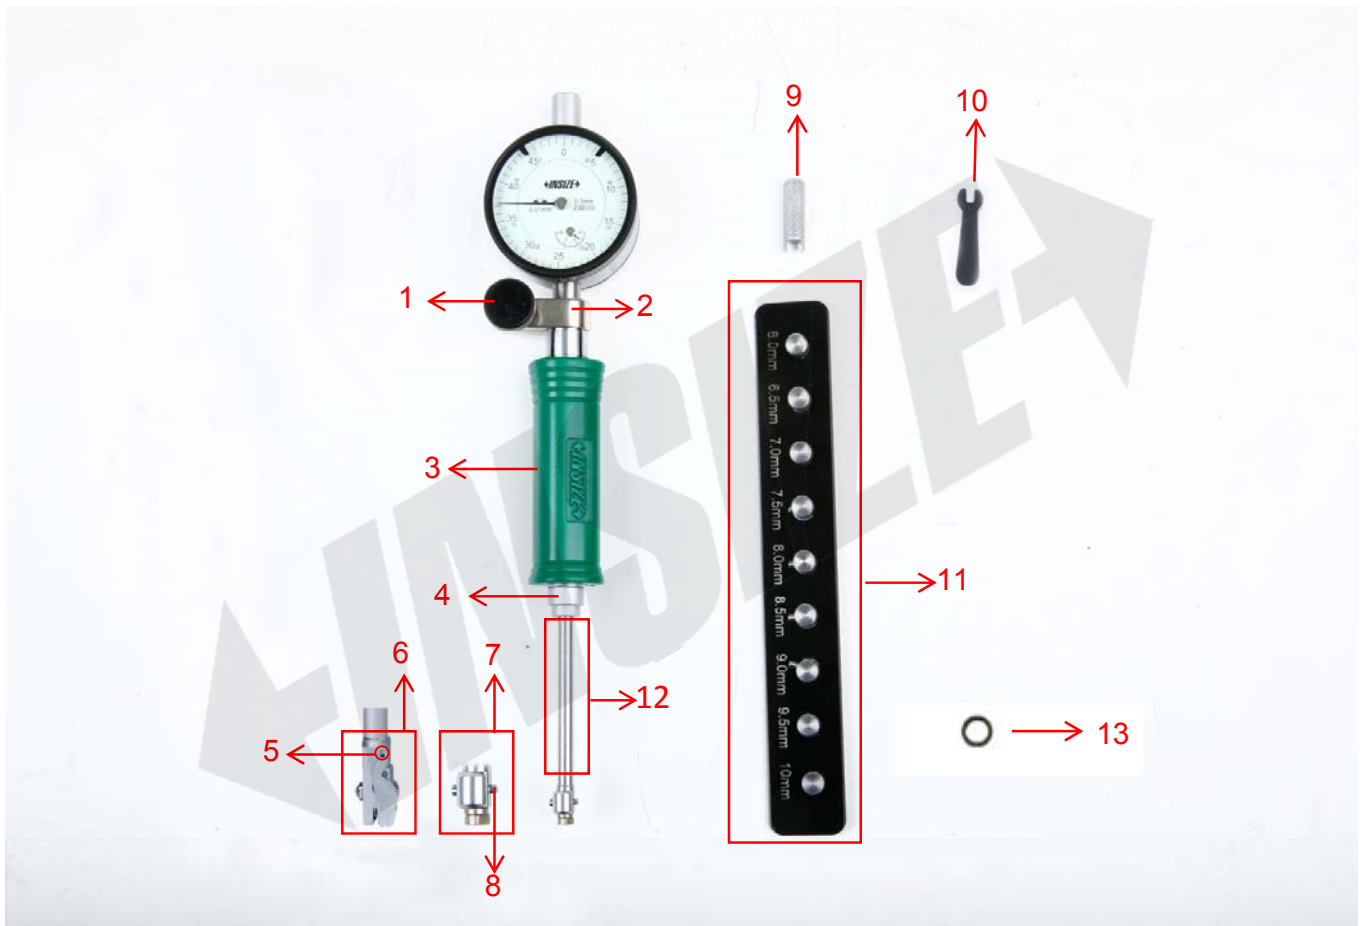

Part NO.	Code	Description
1	SP-BORE-SCREW	Locking screw
2	SP-HOLDER	Holder
3	SP-SB-DBG-4	Handle
4	SP-SLEEVE-18	Shaft sleeve for 2852-18 and 2152-18
5	SP-GUIDE-FIXED-PIN-18	Guide fixed pin for 2852-18 and 2152-18
6	SP-HEAD-B-18	Measuring head for 2852-18 and 2152-18 (not include NO.11)
7	SP-HEAD-A-10	Measuring head for 2852-10 and 2152-10 (not include NO.11)
8	SP-MOVING TIP-2322-10	Moving tips, steel for 2852-10 and 2152-10
	SP-MOVING TIP-2322-18	Moving tips, steel for 2852-18 and 2152-18
9	SP-BORE-WRENCH-A	Wrench for 2852-10 and 2152-10
10	SP-BORE-WRENCH-B	Wrench for 2852-18 and 2152-18
11	7350-10	Interchangeable anvil for 2852-10 and 2152-10 (set)
	7350-18	Interchangeable anvil for 2852-18 and 2152-18 (set)
12	SP-MEASURING BAR-10	Measuring bar for 2852-10 and 2152-10
	SP-MEASURING BAR-18	Measuring bar for 2852-18 and 2152-18
13	SP-BORE-GASKET-0.5	0.5mm gasket for 2852-18