

Spare parts for dial indicator 2306-1F



Part NO.	Code	Description
1	SP-BEZEL-2306	Bezel for 2306
2	SP-MARK-2306	Tolerance mark for 2306
3	SP-WASHER-2306	Glass washer for 2306
4	SP-GLASS-2306	Glass for 2306
5	SP-CAP-2306	Anti-dust Cap for 2306
6	SP-BEZEL YB-2306	Plate for 2306
7	SP-BEZEL LOCK-2306	Bezel locking screw for 2306
8	SP-GUIDE PIN-2306	Guide pin of the spindle for 2306
9	SP-SPINDLE-2306	Spindle for 2306
10	SP-POINT-WL-1	Contact point
11	SP-MAIN GEAR-2306	Main gear for 2306
12	SP-POINTER-2306	Pointer for 2306
13	SP-LOCKING SCREW-2306	Locking screw for the mechanism 2306
14	SP-DIAL PLATE-2306	Dial plate for 2306