


## Spare parts for bore gage 2322/2122 series

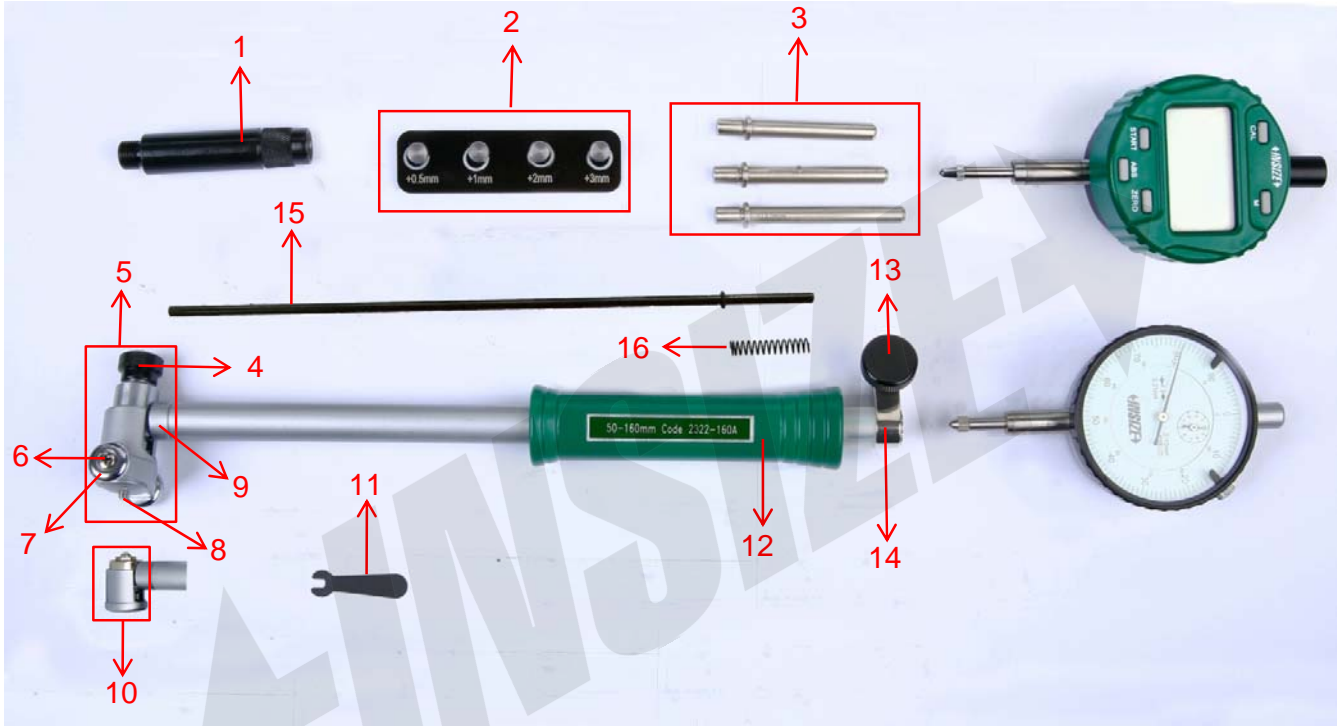

Part NO.	Code	Description
1	SP-EXTENSION ROD-50	Extension rod for 2322-250A/-450A and 2122-250A/-450A
	SP-EXTENSION ROD-55	Extension rod for 2322-160A/-161A and 2122-160A/-161A
	SP-EXTENSION ROD-100	Extension rod for 2322-450A and 2122-450A
2	SP-BORE-GASKET-0.5/1	Gasket for 2322-35A and 2122-35A
	SP-BORE-GASKET-0.5/1/2/3	Gasket for 2322-60A/-100A/-160A/-161A and 2122-60A/-100A/-160A/-161A
	SP-BORE-GASKET-0.5/1/2/3/6	Gasket for 2322-250A/-450A and 2122-250A/-450A
3	7350-35	Interchangeable anvil for 2322-35A and 2122-35A (set)
	7350-60	Interchangeable anvil for 2322-60A and 2122-60A (set)
	7350-100	Interchangeable anvil for 2322-100A and 2122-100A (set)
	7350-160	Interchangeable anvil for 2322-160A and 2122-160A (set)
	7350-161	Interchangeable anvil for 2322-161A and 2122-161A (set)
	7350-250	Interchangeable anvil for 2322-250A and 2122-250A (set)
	7350-450	Interchangeable anvil for 2322-450A and 2122-450A (set)
	SP-7350-60-55	55mm Interchangeable anvil for 2322-60A and 2122-60A
	SP-7350-160-70	70mm Interchangeable anvil for 2322-160A and 2122-160A
	SP-7350-160-105	105mm Interchangeable anvil for 2322-160A and 2122-160A
4	SP-SCREW-NUT-2322-1	Nut for 2322-60A/-100A/-160A/-161A and 2122-60A/-100A/-160A/-161A
	SP-SCREW-NUT-2322-2	Nut for 2322-250A/-450A and 2122-250A/-450A
5	SP-HEAD-D-60	Measuring head for 2322-60A and 2122-60A (not include NO.3\4\9)
	SP-HEAD-D-100/160	Measuring head for 2322-100A/-160A and 2122-100A/-160A (not include NO.3\4\9)
	SP-HEAD-D-250	Measuring head for 2322-250A and 2122-250A (not include NO.3\4\9)
	SP-HEAD-D-450	Measuring head for 2322-450A and 2122-450A (not include NO.3\4\9)
6	SP-GUIDE SCREW-13	Guide screw for 2322-60A/-100A/-160A/-161A and 2122-60A/-100A/-160A/-161A
	SP-GUIDE SCREW-15	Guide screw for 2322-250A/-450A and 2122-250A/-450A (Ø15mm, in pairs)
7	SP-GUIDE WHEEL-13	Guide wheel for 2322-60A/-100A/-160A/-161A and 2122-60A/-100A/-160A/-161A
	SP-GUIDE WHEEL-15	Guide wheel for 2322-250A/-450A and 2122--250A/-450A (Ø15mm, in pairs)

8	SP-MOVING TIP-2322-35	Moving tips, steel, for 2322-35A and 2122-35A
	SP-MOVING TIP-2322-60	Moving tips, ceramic, for 2322-60A and 2122-60A
	SP-MOVING TIP-2322-100	Moving tips, ceramic, for 2322-100A and 2122-100A
	SP-MOVING TIP-2322-160	Moving tips, ceramic, for 2322-160A/-161A and 2122-160A/-161A
	SP-MOVING TIP-2322-250	Moving tips, ceramic, for 2322-250A and 2122-250A
	SP-MOVING TIP-2322-450	Moving tips, ceramic, for 2322-450A and 2122-450A
9	SP-SLEEVE RING-C-35	Sleeve ring for 2322-35A and 2122-35A
	SP-SLEEVE RING-D-60	Sleeve ring for 2322-60A and 2122-60A
	SP-SLEEVE RING-D-100/160	Sleeve ring for 2322-100A/-160A and 2122-100A/-160A
	SP-SLEEVE RING-D-250	Sleeve ring for 2322-250A and 2122-250A
	SP-SLEEVE RING-D-450	Sleeve ring for 2322-450A and 2122-450A
10	SP-HEAD-C-35	Measuring head for 2322-35A and 2122-35A (not include NO.3)
11	SP-BORE-WRENCH-C	Wrench for 2322-35A and 2122-35A
12	SP-SB-DBG-1	Handle for 2322-35A and 2122-35A
	SP-SB-DBG-2	Handle 2322-60A/-100A/-160A/-161A and 2322-60A/-100A/-160A/-161A
	SP-SB-DBG-3	Handle 2322-250A/-450A and 2122-250A/-450A
13	SP-BORE-SCREW	Locking screw
14	SP-HOLDER	Holder
15	SP-DRIVE ROD-160	Drive rod for 2322-160A and 2122-160A
16	SP-ROD SPRING-160	Rod spring for 2322-160A and 2122-160A
	SP-ROD SPRING-250	Rod spring for 2322-250A and 2122-250A
	SP-ROD SPRING-35	Rod spring for 2322-35A and 2122-35A