

## Spare parts for 3D tester 2842



Part NO.	Code	Description
1	SP-POINTER-2842-1	Pointer for 2842-3D
2	SP-BEZEL-2887	Bezel
3	SP-ADJUST SCREW-2842	Adjustable screw for 2842-3D
4	SP-GLASS-2887	Glass for 2887 and 2842-3D
5	SP-2842-DIAL	Dial indicator for 2842-3D(not include the ball)
6	SP-SPINDLE-2842	Spindile for 2842 (with 1pc fixation screw)
7	SP-CAP-2842	Ruber dust cap for 2842-3D